

# HONDA/ACURA IPOD LOCKPICK

## INSTALLATION AND OPERATION MANUAL



Thank you for your purchase of the HONDA/ACURA IPOD LOCKPICK. This unit is designed for applications in a wide variety of HONDA and ACURA vehicles across many years and models. Advanced features including on-screen text, steering wheel, radio and touch screen control of your iPod. The IPOD LOCKPICK will operate in XM capable HONDA or ACURA radios (button labeled XM present) without the loss of any factory functions, even if a factory XM tuner is present. Included with your interface are licensed connectors for reliable iPod operation and stereo AUX input jacks for connection to any other source you would like to play through your factory sound system.

## INSTALLATION PROCEDURE

The HONDA/ACURA IPOD LOCKPICK uses a simple “T” harness for installation using factory connectors so there is no need to cut/splice any wires, or locate power, ground and audio. The interface is truly plug and play. The factory connectors are individually keyed so you cannot plug them into the wrong location.

### 1. VEHICLES WITH OR WITHOUT A FACTORY XM TUNER PRESENT


- The installation of the HONDA/ACURA LOCKPICK is the same for vehicles with or without a factory XM tuner present. After gaining access to the back of the radio, locate the 14 pin connector which matches the connectors of your IPOD LOCKPICK harness. Unplug the factory 14 pin connector and plug it into the female connector of the LOCKPICK harness. Then plug the male end of the harness into the former factory location

### 2. PROGRAMMING YOUR INTERFACE

- The HONDA/ACURA IPOD interface is universal in application and requires only a simple switch setting to properly program it to match your vehicle and options. The IPOD LOCKPICK is shipped with all switches in the UP position. If your vehicle is already equipped with a factory XM tuner then place switch 4 in the DOWN position. This will program the LOCKPICK for use while in the presence of an XM tuner and prevent conflict between the components. If you have an XM tuner but are not currently subscribed, still place switch 4 in the DOWN position. All other applications where an XM tuner is not present will leave all interface switches in the UP position. **After positioning the programming switch, plug the interface into the harness.** This will lock in the setting you have selected. If you have made a mistake and need to change the programming setting, unplug the LOCKPICK module first and then change the switch position. If the interface is not unplugged while changing the programming settings, the new programming will not be performed and improper operation may result.

### 3. CONNECT THE IPOD HARNESS AND/OR AUX INPUT

- Included with your interface is a cable designed to connect an iPod/iPhone to the Lockpick. Plug the cable into the Lockpick and the other end into the bottom of the iPod/iPhone. If your iPod does not have a bottom docking connector, it is not compatible with the LOCKPICK interface. Compatible iPods include NANO, MINI, 4<sup>th</sup> and 5<sup>th</sup> generation iPods including photo/video. Also available on your LOCKPICK are AUX input jacks which may be connected to any stereo audio and source and played through your factory sound system.

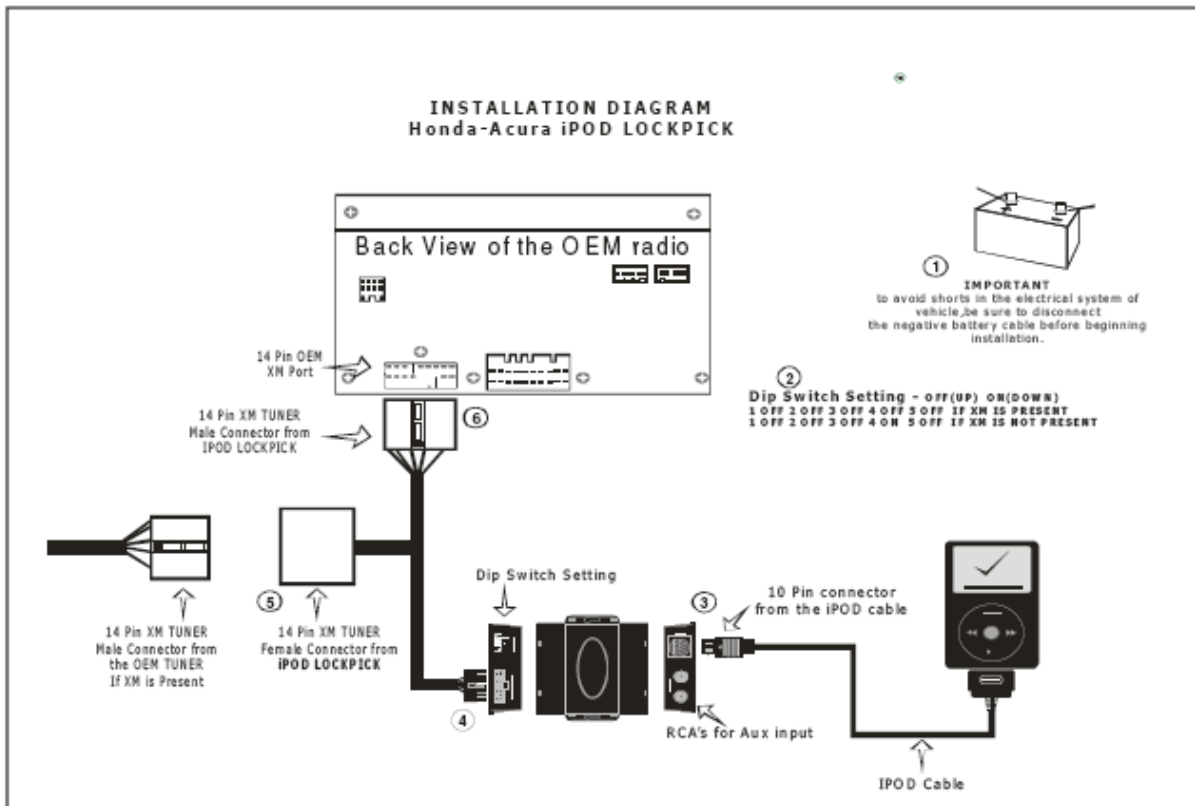

**IF A FACTORY XM TUNER IS PRESENT:**

To access the iPod functions and text, press the XM button one time.

When you hear the OEM XM tuner, Press FM and then push the XM button again. This will start the iPod control Mode.

To switch back to factory XM, Press FM and then the XM button again. This will return to standard XM radio.

**IF A FACTORY XM TUNER IS NOT PRESET:**

To access the iPod functions and text, press the XM button one time.

Button	Function
<b>Preset 1</b>	PLAYLIST: Allows change by PLAYLIST with the Category button.
<b>Preset 2</b>	ARTIST: Allows change by ARTIST with the Category button.
<b>Preset 3</b>	ALBUM: Allows change by ALBUM with the Category button.
<b>Preset 4</b>	GENRE: Allows change by GENRE with the Category button.
<b>Preset 5</b>	SIMPLE MODE ON.
<b>Preset 6</b>	SIMPLE MODE OFF.
<b>Tune Up/Down/Turn</b>	Change song number up or down.

**Category Up – Down** Search for PLAYLIST, ARTIST, ALBUM OR GENRE

**Scan** button Press to select **AUX INPUT** on the interface

**DISP** button Press to select additional text for display on the radio

The **SIMPLE MODE** selection will return control of the iPod to its own buttons. Songs can still be changed with the buttons on the radio and steering wheel although no text is displayed on the radio.

# OPERATION OF THE HONDA/ACURA IPOD LOCKPICK

The HONDA/ACURA IPOD LOCKPICK is programmed to operate in a large variety of HONDA and ACURA vehicles. Below are examples of different compatible year and type radios along with demonstrations of iPod functions and text displayed. Other radios and navigation systems are also compatible and not pictured in the below demonstrations. If your radio has an XM button present, then the HONDA/ACURA LOCKPICK will work in your car.

## HONDA ACCORD



TOGGLE BETWEEN XM AND IPOD CONTROL WITH MODE BUTTONS

SELECT PRESET 1-4 (PLAYLIST, ARTIST, ALBUM, GENRE), THEN SEARCH THROUGH YOUR SELECTION WITH CATEGORY BUTTONS

PRESS SCAN BUTTON TO SWITCH TO INTERFACE AUX INPUT

PRESS DISP BUTTON FOR ADDITIONAL TEXT

PRESS TUNE BUTTONS TO ADVANCE UP AND DOWN THROUGH THE SONGS IN YOUR SELECTED CATEGORY

SELECT PRESET 5 FOR IPOD SIMPLE MODE WITH REDUCED FUNCTION AND NO ON SCREEN TEXT  
SELECT PRESET 6 FOR FULL CONTROL WITH ON SCREEN TEXT

## HONDA CIVIC



THE CIVIC RADIO USES A KNOB FOR TUNING CONTROL. TURN THE TUNING KNOB TO ADVANCE THROUGH SONGS WITHIN SELECTED CATEGORY

**POPULAR HONDA RADIOS  
IPOD LOCKPICK READY!!  
HONDA ODYSSEY**



**HONDA RIDGELINE**



**HONDA ELEMENT**



**HONDA CRV**

